


REPLACING THE CE-02 ELECTRODE

Carefully unscrew the old electrode from the cell flow chamber. Generously wrap the provided Teflon tape around the threaded part of the electrode several times to prevent leaks. Tighten hand tight DO NOT OVER TIGHTEN.

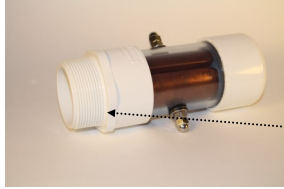

Apply Teflon Tape around the threaded area
wrap 7 rotations of tape.

CLEANING THE ELECTRODES

Unscrew the electrode from the cell flow tee and inspect. A thin layer of patina will form on the copper electrodes, to clean choose one of the methods below.

1. Hold the electrode upside down add 1/2 cup of baking soda, insert a small thin bottle brush fill with white distilled vinegar and scrub the electrodes removing the blue/green coating simple rinse out the remaining baking soda with tap water.

2. Using the same method above substitute the baking soda and vinegar with lemon juice or VERY CAREFULLY dilute muriatic acid/water solution.

Re-install the clean electrode following the preplacement instruction at the top of the page. REPLACING THE CE-02 ELECTRODE. You will need to wrap the threads again with Teflon tape.



RE-ORDERING A NEW ELECTRODE VISIT

Website: www.mistypoolproducts.com

Email: info@mistypoolproducts.com

Amazon.com

Replacement Electrodes for any 2"

Part# CE-02 FITS- R-20/40/AE-50

Replacement Electrodes Fits black tee

Part# CE-11 FITS -RC-50 RS-50

Replacement Copper bars only with hardware End Drilled Part# CE-13E DIY