


THANK YOU FOR YOUR PURCHASE

REPLACING THE CE-03 ELECTRODE **NOTE: 2 INCH PLUG**

Using a 2 3/4" adjustable wrench carefully unscrew the old electrode from the cell flow chamber. Generously wrap Teflon tape around the threaded part of the electrode several times to prevent leaks. Only tighten to prevent leaks DO NO OVER TIGHTEN.

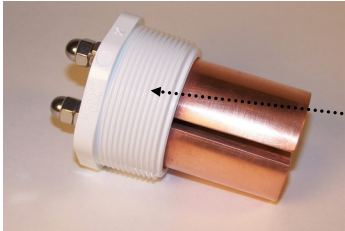

Apply Teflon Tape around the **2 Inch** threaded plug
wrap 7 rotations of tape.



CLEANING THE ELECTRODES

Using a 2 3/4 adjustable wrench unscrew the electrode from the cell flow tee and inspect. A thin layer of patina will form on the copper electrodes, to clean choose one of the methods below.

1. Add 1/2 cup of baking soda in a container that will hold the electrode fill with white distilled vinegar and scrub the electrodes removing the blue/green coating using an old toothbrush. Simple rinse off the remaining baking soda with tap water.



2. **VERY CAREFULLY** dilute three parts water /one part muriatic acid solution. Scrub with an old tooth brush rinse with water and dry.

Re-install the clean electrode following the preplacement instruction at the top of the page.

REPLACING THE CE-03 ELECTRODE. You will need to wrap the threads again with Teflon tape.

RE-ORDERING A NEW ELECTRODE VISIT

Website: www.mistypoolproducts.com

Email: info@mistypoolproducts.com

Amazon.com

Replacement Electrodes for any 2"

Part# CE-02 FITS- R-20/40/AE-50

Replacement Electrodes Fits black tee

Part# CE-11 FITS -RC-50 RS-50

Replacement Copper bars only with hardware End Drilled Part# CE-13E DIY